


PACATO Mechanical Violin Pegs

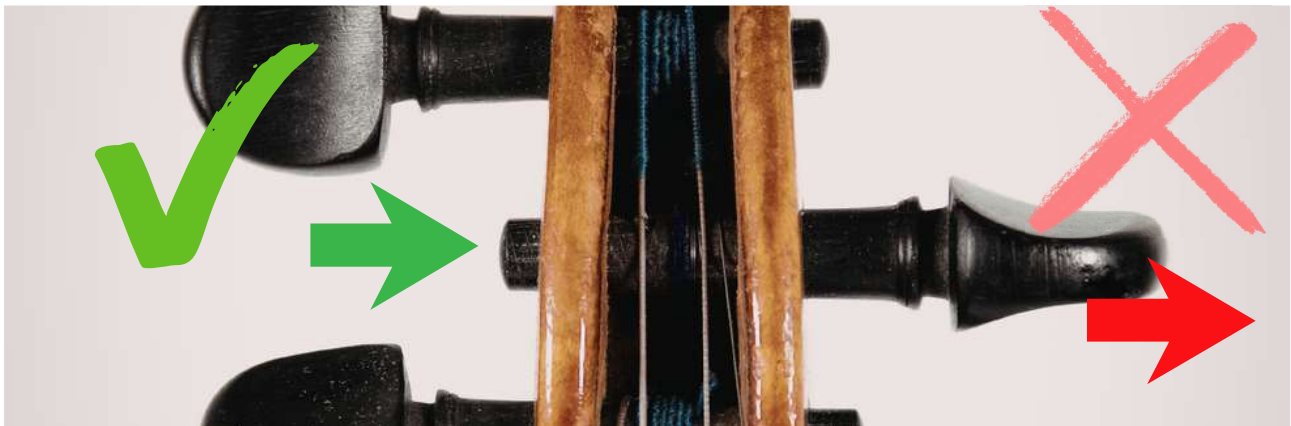

DRÜCKEN
PRESS

NICHT ZIEHEN
DON'T PULL

PACATO Mechanische Stimmwirbel – Kurzanleitung

Mechanische Wirbel besitzen ein internes Getriebe. Beim Stimmen dreht sich nur der Mechanismus, während der Wirbelschaft fest im Wirbelloch des Wirbelkastens sitzt.

Stimmen

Wirbel drehen und dabei leicht in Richtung Wirbelkasten drücken.

Den Wirbel **nicht herausziehen**.

Saitenwechsel

1. Saite entspannen
2. Saite aus dem Wirbelloch entfernen
3. Neue Saite durch das Loch führen
4. Gleichmäßig aufwickeln und stimmen

Hinweis

Bei Bedarf sollten Wirbellöcher durch einen qualifizierten Geigenbauer angepasst werden.

PACATO Mechanical Violin Pegs – Quick Guide

Mechanical pegs use an internal gear system. During tuning only the mechanism rotates, while the peg shaft remains fixed in the pegbox hole.

Tuning

Turn the peg while gently pressing it toward the pegbox.

Do not pull the peg outward.

Changing strings

1. Loosen the string
2. Remove it from the peg hole
3. Insert the new string through the hole
4. Wind evenly and tune

Note

Peg holes may require adjustment by a professional violin maker.